

# PARTS LIST FOR PRIMUS 45 HANDPIECE

NO.	PARTS NAME
1	PRIMUS 45 HAND CAP COVER
2	PRIMUS 45 HAND CAP HEAD
3	PRIMUS 45 CHUCK HOUSING C-RING
4	PRIMUS 45 1370 WAVE WASHER
5	PRIMUS 45 COLLAR
6	PRIMUS 45 BEARING FIX WASHER
7	PRIMUS 45 1370 WASHER
8	PRIMUS 45 BALL BEARING 1370ZZ
9	PRIMUS 45 HAND CAP BODY
10	PRIMUS 45 BUSH
11	PRIMUS 45 BALL BEARING 1480ZZ
12	PRIMUS 45 1480 WASHER
13	PRIMUS 45 1480 WAVE WASHER
14	PRIMUS 45 TEST BUR
15	PRIMUS 45 COLLET CHUCK 2.35
16	PRIMUS 45 CHUCK HOUSING
17	PRIMUS 45 CHUCK SPRING
18	PRIMUS 45 JOINT SHAFT BODY
19	PRIMUS 45 JOINT SHAFT
20	JOINT SHAFT FIX PIN
21	BH60 O-RING
2	PRIMUS 45 BEARING BUSH COLLAR WASHER
23	PRIMUS 45 BEARING BUSH COLLAR
24	BH60 CONNECTOR
25	PRIMUS 45 SET RING WASHER
26	PRIMUS 45 SET RING TEFLON WASHER
27	PRIMUS 45 SET RING
28	PRIMUS 45 SET RING INSERT
29	PRIMUS 45 CAM TEFLON WASHER
30	PRIMUS 45 CAM
31	PRIMUS 45 CAM BALL
32	PRIMUS 45 M2.5
33	PRIMUS 45 MOVING HOUSING SPRING
34	PRIMUS 45 MOVING HOUSING
35	PRIMUS 45 MOTOR CASE COVER
36	PRIMUS 45 SNAP RING

NO.	PARTS NAME
37	PRIMUS 45 1030 FIX O-RING
38	PRIMUS 45 MOTOR CASE
39	PRIMUS 45 MOTOR CASE BOLT
40	SM110 MAGNET C
41	SM110 MAGNET GUIDE
42	PRIMUS 45 COPPER WASHER
43	PRIMUS 45 1030 WAVE WASHER
44	PRIMUS 45 BALL BEARING 1040ZZ
45	PRIMUS 45 1040 COPPER WASHER
46	PRIMUS 45 1040 TEFLON WASHER
47	PRIMUS 45 1040 SPACER
48	PRIMUS 45 SHAFT Ø4
49	PRIMUS 45 CORE
50	PRIMUS 45 FRONT SHAFT BUSH Ø4
51	PRIMUS 45 COMMUTATOR
52	PRIMUS 45 COIL
53	PRIMUS 45 WEDGE
54	PRIMUS 45 FAN
55	830 SPACER
56	TEFLON WASHER
57	BEARING HOUSING
58	BACK BEARING SIT
59	PRIMUS 45 BRUSH HOLDER
60	PRIMUS 45 CARBON BRUSH
61	PRIMUS 45 CARBON BRUSH SPRING
62	PRIMUS 45 CARBON BRUSH CAP
63	PRIMUS 45 TERMINAL (L)
64	PRIMUS 45 TERMINAL (R)
65	PRIMUS 45 CARBON BRUSH BOLT
66	PRIMUS 45 BALL BEARING 1030ZZ
67	BR BRUSH BOLT
68	MOTOR CORD
69	CARBON HOUSING COVER
70	PRIMUS 45 SPINDLE ASSEMBLY
71	ARMATURE ASSEMBLY

# PRIMUS 45 HANDPIECE

